

aeroQUAL

SM70  
Monitor

# User Guide



aeroQUAL

## Contents

<b>Foreword</b>	<b>1</b>
<b>Statements of Compliance</b>	<b>2</b>
<b>Warranty</b>	<b>3</b>
<b>For Your Safety</b>	<b>5</b>
<b>Monitor Components</b>	<b>6</b>
<b>About Your Monitor</b>	<b>6</b>
<b>Installation</b>	<b>7</b>
<i>Turning the Monitor On and Off</i>	7
<i>Warm up</i>	7
<b>Operating Instructions</b>	<b>8</b>
<i>Setting the Relay/Buzzer Set Point</i>	8
<i>Performance Checking</i>	9
<i>Replacing the Sensor Board</i>	10
<i>Status LED</i>	11
<b>Troubleshooting</b>	<b>12</b>
<b>Care and Maintenance</b>	<b>13</b>
<b>Disposal /Recycling</b>	<b>13</b>
<b>Specifications – SM70</b>	<b>14</b>
<b>Dimensions</b>	<b>15</b>

## Foreword

Copyright Aeroqual Limited. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents of this document in any form without the prior written permission of Aeroqual Limited is prohibited.

“Aeroqual” and “Aeroqual Limited – Making the Invisible Visible” are registered trademarks of Aeroqual Limited. Other product and company names mentioned herein may also be trademarks or trade names.

Aeroqual operates a policy of continuous development. Aeroqual reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Aeroqual be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document.

Aeroqual reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with the Aeroqual dealer nearest to you.

19.08.05

© Aeroqual Limited 2005. All rights reserved.

### Aeroqual Limited

6/192 Victoria Street West, Auckland, New Zealand  
 phone +64 9 307 0441  
 fax +64 9 307 0443  
 web [www.aeroqual.com](http://www.aeroqual.com)

## Statements of Compliance

1. The Aeroqual SM70 Monitor complies with EN 61000-6-3:2001
2. The Aeroqual SM70 Monitor complies with EN 61000-6-1:2001
3. The Aeroqual SM70 Monitor complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) these devices may not cause harmful interference, and (2) these devices must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## Warranty

Thank you for purchasing this Aeroqual product. To get maximum use of the features of your new product we recommend that you follow a few simple steps:

- Read the guidelines for safe and efficient use.
- Read all the terms and conditions of your Aeroqual Warranty.
- Save your original receipt. You will need it for warranty repair claims.

Should your Aeroqual product need warranty service, you should return it to the dealer from whom it was purchased or contact Aeroqual.

## Our Warranty

Aeroqual warrants this product to be free from defects in material and workmanship at the time of its original purchase by a consumer, and for a subsequent period as stated in the following table:

Products	Warranty Period
SM70 PC Board	One year from the date of purchase
Sensor heads for all gases	Six months from the date of purchase

This warranty is expressly limited to the original owner who purchases the equipment directly from Aeroqual or from an authorized Aeroqual dealer.

## What we will do

If, during the warranty period, this product fails to operate under normal use and service, due to improper materials or workmanship, Aeroqual subsidiaries, authorized distributors or authorized service partners will, at their option, either repair or replace the product in accordance with the terms and conditions stipulated herein.

## Conditions

1. The warranty is valid only if the original receipt issued to the original purchaser by the dealer, specifying the date of purchase, is presented with the product to be repaired or replaced. Aeroqual reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the product from the dealer.
2. If Aeroqual repairs or replaces the product, the repaired or replaced product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may be via functionally equivalent reconditioned units. Replaced faulty parts or components will become the property of Aeroqual.
3. This warranty does not cover any failure of the product due to normal wear and tear, damage, misuse, including but not limited to use in any other than the normal and customary manner, in accordance with Aeroqual's user guide for use, faulty installation, calibration and maintenance of the product, accident, modification or adjustment, events beyond human control, improper ventilation and damage resulting from liquid or corrosion.
4. This warranty does not cover product failures due to repairs, modifications or improper service performed by a non-Aeroqual authorized service workshop or opening of the product by non-Aeroqual authorized persons.
5. The warranty does not cover product failures which have been caused by use of non-Aeroqual original accessories.
6. This warranty becomes void if a non-Aeroqual approved AC/DC adaptor or battery is used.
7. Tampering with any part of the product will void the warranty.
8. Damage to the sensors can occur through exposure to certain sensor poisons such as silicones, tetraethyl lead, paints and adhesives. Use of Aeroqual sensors in these environments containing these materials may (at the discretion of Aeroqual) void the warranty on the sensor head. Exposure to gas concentrations outside of the design range of a specific Aeroqual sensor head can adversely affect the calibration of that sensor head and will also void this warranty as it applies to the replacement of sensor heads.
9. Aeroqual makes no other express warranties, whether written or oral, other than contained within this printed limited warranty. To the fullest extent allowable by law all warranties implied by law, including without limitation the implied warranties of merchantability and fitness for a particular purpose, are expressly excluded, and in no event shall Aeroqual be liable for incidental or consequential damages of any nature whatsoever, however they arise, from the purchase or use of the product, and including but not limited to lost profits or business loss.
10. Some countries restrict or do not allow the exclusion or limitation of incidental or consequential damage, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which may vary from country to country.

## For Your Safety

Read these simple guidelines. Ignoring these guidelines may be hazardous.

- **USE SENSIBLY**  
Use only as per this user guide.
- **USE AEROQUAL APPROVED SERVICE**  
Only approved service personnel must work on this product.
- **ACCESSORIES**  
Use only approved accessories. Do not connect incompatible products.
- **CONNECTING TO OTHER DEVICES**  
When connecting to any other device, read the appropriate user guide for detailed safety instructions. Do not connect incompatible products.
- **HAZARDOUS ENVIRONMENTS (Ozone Sensors Only)**  
Do not use the Ozone Sensors in or near volatile fuel or chemicals.
- **HEALTH AND SAFETY IN THE WORKPLACE**  
The Aeroqual SM70 Monitors are used to monitor ambient gas concentrations. Aeroqual does not guarantee user safety. In hazardous environments, an appropriate Health and Safety plan should be in place.

## Monitor Components

### SM 70 Monitor

The following components are supplied with the SM70 Monitor:

- SM70 Monitor with Alarm Buzzer
- 12 VDC 800 mA AC/DC adaptor
- Enclosure mounting brackets
- User guide

Please check that all these components have been supplied and contact your dealer or Aeroqual on email at: [sales@aeroqual.com](mailto:sales@aeroqual.com) if any of the components are missing.

### About Your Monitor

The Aeroqual **SM70 Monitor** has been specifically designed to incorporate Aeroqual's in-depth knowledge of accurate ambient gas measurement. Different sensor modules are used for specific gases or depending upon whether high or low concentrations are to be measured.

The monitor is calibrated prior to delivery and does **not normally need to be re-calibrated** during its life. (Specific user guides are supplied for the special operations of particular sensor modules).

The Aeroqual **SM70 Monitor** comes with in-built diagnostics, which will inform the service personnel if the sensor is not operating correctly.

## Installation

Wall mounting brackets are provided and fit into the holes at each corner of the enclosure. The **SM70** should be installed at a location that is free from contaminants that might affect the performance of the sensor module. In general the SM70 should **never** be exposed to:

- steam, fumes, water or chemical spray,
- high condensing humidity
- cooking vapors/aromas
- paint fumes
- high levels of dust
- constant high air flows

## Turning the monitor on and off

The SM70 is designed to run constantly. To turn the monitor on:

- Connect the AC/DC adaptor to the mains supply. Ensure that the adaptor is correctly rated for the power supply.
- Plug the adaptor into the monitor.

## Warm up

Prior to operation the monitor must be warmed up to burn off contaminants on the sensor. When the monitor is first switched on it will warm up for 10 minutes. The monitor should be run for 24 hours prior to use if it has been switched off for more than 7 days.

## Operating Instructions

### Setting the Relay/Buzzer Set Point

The Relay/Buzzer Set Point is factory set to the following values (unless otherwise specified):

Relay dipswitch (1234)	Ozone Low (ppm)	Ozone High (ppm)	VOC (ppm)	Perc (ppm)	Ammonia (ppm)
off on off on	0.125	5	100	50	50

The Alarm Buzzer and/or Relay Set Point can be altered by opening the enclosure and adjusting the set-point dip-switches (shown below).

The relay, alarm buzzer & sensor diagnostics are inactive during the warm up period.



The relay / alarm buzzer set-point settings are as follows:

Relay dipswitch (1234)	Ozone low	Ozone High	VOC	Perc	Ammonia
on on on on	0	0	0	0	0
off on on on	0.025	1	20	10	10
on off on on	0.05	2	40	20	20
off off on on	0.075	3	60	30	30
on on off on	0.1	4	80	40	40
off on off on	0.125	5	100	50	50
on off off on	0.15	6	120	60	60
off off off on	0.175	7	140	70	70
on on on off	0.2	8	160	80	80
off on on off	0.225	9	180	90	90
on off on off	0.25	10	200	100	100
off off on off	0.3	12	250	120	250
on on off off	0.35	14	300	140	500
off on off off	0.4	16	350	160	750
on off off off	0.45	18	400	180	1000
off off off off	0.5	20	500	200	2000

## Performance Checking


It is common practice for all sensor equipment to be checked and tested regularly. Aeroqual recommends that this be done at least six-monthly. Basic "Performance Checking" can be carried out very simply by users of the sensor equipment.

Aeroqual recommends two simple tests:-

1. Simple "Bump" Test  
(demonstrates that the sensor is responsive to an increase in gas concentration)  
This requires exposing the sensor to the gas in question (eg. perchloroethylene, ammonia, VOC or ozone vapour), so as to trigger the on-board buzzer or digital readout.
2. Field Calibration Check  
This requires that the **SM70** monitor and an Aeroqual handheld monitor be exposed simultaneously to an increase in gas concentration and the readings compared. The readings should be the same at +/- 15%.

If you have performance concerns after these simple tests the unit may require re-calibration servicing. Contact Aeroqual Ltd or your distributor for a recommended calibration laboratory.

## Replacing the Sensor Module

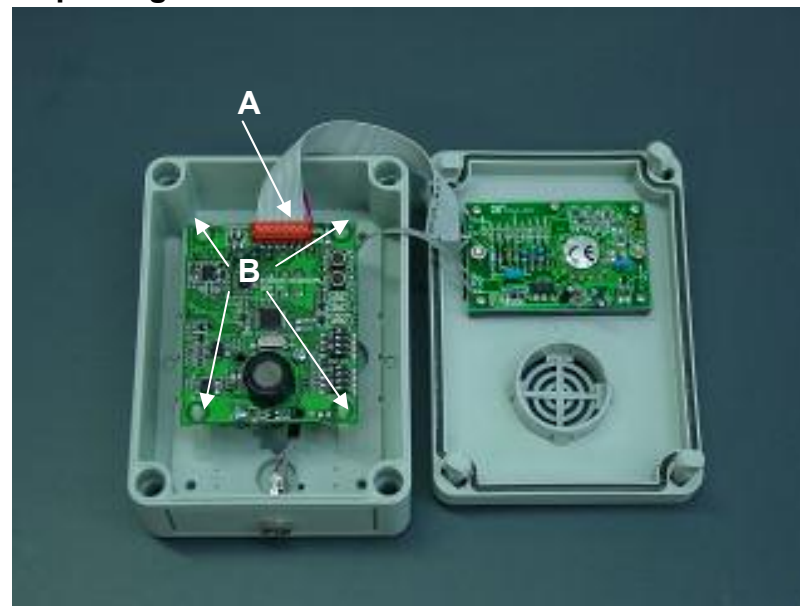

- Unscrew the four lid screws, remove lid and view the interior of the enclosure as shown above.
- Remove the micro-match connector (A) and release the plastic standoffs (B) securing the printed circuit board by squeezing the top of the standoff.
- Now replace the printer circuit board and refit the micro-match connector.
- Replace the lid and secure the lid screws.

## Status LED

The Status LED is located on the Sensor board (see picture on page 8), and is only of interest if the monitor appears to be operating incorrectly.

At start up, the Status LED will flash 6 times at an interval of 0.5 seconds.

During the 10 minute warm-up time, the Status LED will flash at an interval of 2 seconds.

The Status LED remains on under normal operation.

If the sensor fails, the status LED will flash quickly at an interval of 0.3 seconds.

## Troubleshooting - SM70

Fault Description	Possible cause	Remedy
No power	Lead connection broken	Reconnect power lead
	Power supply failure	Replace 12V DC power supply
	SM70 damaged	Replace unit
	Sensor module damaged	Replace sensor module
Sensor failure when the sensor is new	Insufficient warm up	Run the sensor on full power for 24-48 hours.
	Air contaminated	Move the sensor to cleaner environment and check reading
	Sensor damaged	Replace sensor module
Reading high under zero gas conditions	Background gas level higher than normal	Move sensor to clean air and recheck baseline
	Interferent gas present	Move sensor to clean air and recheck baseline
	Sensor damaged	Replace sensor
Reading lower than expected reading in the presence of sensor gas	Sensor correct	Check calibration.
	Interferent gas present	Move sensor to clean air and check reading upon exposure to known gas concentration
	Local air flow too high (ozone sensors) or too low (VOC, Perc and ammonia sensors)	Modify the airflow into and around the sensor.
	Sensor calibration lost	Replace /refurbish sensor module
Reading higher than expected in the presence of sensor gas	Sensor correct	Check calibration of gas generator.
	Interferent gas present	Move sensor to clean air and check reading upon exposure to known gas concentration
	Sensor calibration lost	Replace /refurbish sensor module
Reading unstable	Power supply unstable	Install stable power supply
	Power supply current rating incorrect	Install power supply with correct rating
	Local air flow too high	Reduce air flow
	Environmental conditions fluctuating	Reduce fluctuations

## Care and Maintenance

Your Aeroqual Monitor is a product of superior design and quality and should be treated with care. When using your Aeroqual Monitor:

- Keep it and all its parts and accessories out of the reach of small children.
- Keep it dry. Avoid water and/or condensation as humidity and liquids containing minerals may corrode electronic circuits.
- Do not use or store in dusty, dirty areas.
- Do not store or turn off the monitor in temperatures below 10°C.
- This unit is designed for use at temperatures between -5°C and +50°C (23°F and 120°F). Sudden changes in temperature will cause condensation that may damage the electronic componentry.
- Do not drop, knock or shake as this could lead to internal damage.
- Do not use harsh chemicals, cleaning solvents or strong detergents for cleaning. Wipe with a soft cloth slightly dampened with a mild soap-and-water solution.

## Disposal / Recycling

Please note that this is an electronic product and disposal should be in line with your local or country legislation. The plastic casing of the product is made from an ABS blended material and is marked accordingly.

## Specification for SM70

Sensor Specification			
Sensor	Range	Accuracy	Resolution
Ozone <sup>1</sup>	0 – 0.5 ppm	< +/- 0.02 ppm, 0 to 0.1 ppm < +/- 20%, above 0.1ppm	0.001 ppm
	0 – 20 ppm	< +/- 20% (above 0.5ppm)	0.01 ppm
Ammonia <sup>1</sup>	0 to 200 ppm	< +/- 10 ppm	1 ppm
Perchloroethylene	0 to 200 ppm	< +/- 10%	1 ppm
Hydrocarbon	0 to 500 ppm	< +/- 10%	1 ppm
Carbon monoxide	0 to 400 ppm	< +/- 10 ppm	1 ppm
VOC <sup>2</sup> (toluene)	0 to 400 ppm	< +/- 15%	1 ppm
Other gases	Please enquire	please enquire	please enquire
Temperature	-40 to 120 °C	+/- 0.3 °C	0.01 °C
Humidity	0 to 100 % RH	2 % RH	1% RH

Power	
Input	11-15 VDC
Consumption	2.5 W max
Outputs	
0-5V analog	10 bit
3 x LED indicators	Power, sensor status, relay status
Relay	Onboard 240V / 8A
Display	3 digit LCD
Mechanical	
Board Size	60 mm x 75 mm
Fan (if required)	Onboard ball-bearing 50,000 hours
Sensor filter	Onboard
Optional Functions (Non Standard)	
12-bit 0-5 V analog	Onboard option
RS232 communication	Onboard option
RS485	Separate board
Environmental	
Operating temperature	-20 °C to 50 °C
Operating humidity	5% to 95% RH (non-condensating)

